

STRIKER

HYDRAULIC AUGER

Drilling Drive Series Planetary Drive Attachments



Read and understand the owners / operators manual before using this product.



Inspect equipment before operation. Never operate equipment that is not in proper working order. Check all hardware to ensure it is tight.



DO NOT exceed the recommended lift capacity of the prime mover. Know the weight of this product before installing and operating.



DO NOT work under equipment! Ensure all connections are tight and the mounting frame is rigidly secured to the prime mover.



Ensure all hydraulic lines are of adequate length and have enough slack for full range of motion. A hydraulic hose rupture can cause injury.



Toku America Inc.
1-877-954-9923
3900 Ben Hur Ave #3 | Willoughby, OH 44094
www.toku-america.com



IMPORTANT!

DO NOT cause side loading or binding. Excessive side loading or binding can cause output shaft deflection and or failure. Such a failure could result in injury and extensive product damage. Use proper operating positioning when using this product.

Read owners / operators manual for proper operation and positioning!

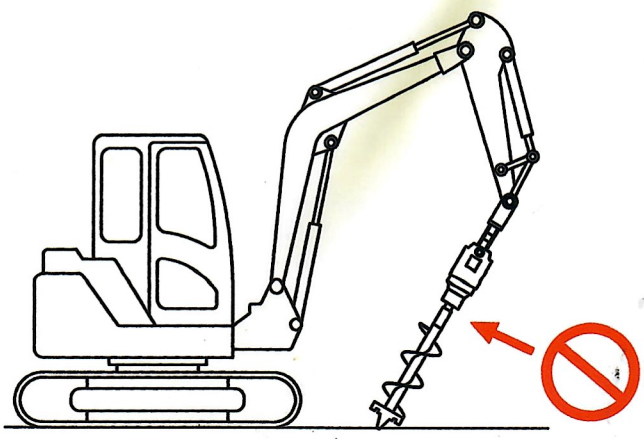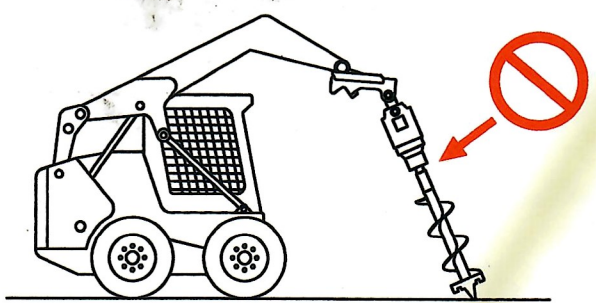

Toku America Inc.
1-877-954-9923
3900 Ben Hur Ave #3 | Willoughby, OH 44094
www.toku-america.com